

GENERAL SAFETY

Contact Event Hire for information and advice on the suitability and safety of this type of equipment. There is a risk of injury if you do not follow the instructions printed in this guide.

This equipment should only be used by a competent adult who has read and understood these instructions. Anyone with a temporary or permanent disability should seek expert advice before using the equipment.

Keep all children, animals and bystanders away from the work area. Ensure the floor of the work area is free from trip hazards and non-slip. Never use the equipment if you are ill, tired or under the influence of alcohol or drugs.

Never operate electrical switches with wet hands. Always switch off and unplug the equipment from the power supply before moving or cleaning.

Check the equipment before use, if it shows signs of damage request a replacement.

ELECTRICAL SAFETY

The equipment is designed to plug directly into a standard 240volt, 13 amp socket. Make sure the equipment and power socket are switched off before plugging into the power supply.

If the equipment fails to operate or the power cable or plug becomes damaged, contact Event Hire. **Do not try to repair it yourself.**

Keep the power cable out of harm's way. Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard.

Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock.

Ensure the water boiler and power socket are switched off before plugging in.

OPERATING GUIDE

When siting the unit, make sure that it is level and that there is a free flow of air around the unit and that any vents are not blocked.

Partitions, walls, furniture and other materials less than 100mm from the unit should be made from non-combustible material.

Do not fill with water.

Switch on the power supply. The green neon light indicates that power is on.

Select the desired temperature setting on the control knob and allow the unit to heat up.

OPERATING GUIDE cont'd

Place the hot food in the containers, remembering that the bain marie is intended to maintain food temperature only and is not designed as a cooker.

Unplug the unit prior to moving and never attempt to move the unit while it is hot.

EQUIPMENT CARE

Once you have finished with the unit, switch off and unplug. Allow the unit to cool completely.

Do not use sharp objects, metal scrapers, wire brushes or wire wool pads as they can scratch the steel.

Do not use bleach or any corrosive detergent as they will damage the surface of the unit.

Finally wipe the exterior with a damp cloth.