

### GENERAL SAFETY

Contact Event Hire for information and advice on the suitability and safety of this type of equipment.

There is a risk of injury if you do not follow the instructions printed in this guide.

This equipment should only be used by a competent adult who has read and understood these instructions. Anyone with a temporary or permanent disability should seek expert advice before using the equipment.

Keep all children, animals and bystanders away from the area of use.

Ensure the fan is sited on a level desk and ensure the power cable is out of harm's way and does not become a trip hazard.

Never set up or use the fan if you are ill, tired or under the influence of alcohol or drugs.

Never plug in or operate electrical switches with wet hands. Always switch off and unplug the fan from the power supply before moving or cleaning.

Check the equipment before use, if it shows signs of damage or if the cage guard is not fitted securely request a replacement.

### ELECTRICAL SAFETY

The fan is designed to plug directly into a standard 240volt, 13 amp socket.

Make sure the fan is switched off before plugging into the power supply.

If the equipment fails to operate or the power cable or plug become damaged, contact Event Hire, do not try to repair it yourself.

Keep the power cable out of harm's way. Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard.

Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock.

### OPERATING GUIDE

Position the fan on a level desk.

The fan is designed to rotate during use so you must allow sufficient space to accommodate the rotation without damage to any other items on the desk

Make sure the fan is switched off before plugging into the power supply.

Keep the power cable out of harm's way.

Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard.

Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock.

The fan has 3 speeds which can be selecting using the buttons marked 1, 2 or 3.