

### GENERAL SAFETY

Contact Event Furniture Limited for information and advice on the suitability and safety of this type of equipment.

There is a risk of injury if you do not follow the instructions printed in this guide. This equipment should only be used by a competent adult who has read and understood these instructions. Anyone with a temporary or permanent disability should seek expert advice before using the equipment.

Keep all children, animals and bystanders away from the work area. Ensure the floor of the work area is free from trip hazards and non-slip. Never use the equipment if you are ill, tired or under the influence of alcohol or drugs. Never operate electrical switches with wet hands.

Always switch off and unplug the equipment from the power supply before moving or cleaning. Check the equipment before use, if it shows signs of damage request a replacement.

### ELECTRICAL SAFETY

The equipment is designed to plug directly into a standard 240volt, 13 amp socket. Make sure the equipment and power socket are switched off before plugging into the power supply.

If the equipment fails to operate or the power cable or plug become damaged, contact Event Furniture Limited. Do not try to repair it yourself.

Keep the power cable out of harm's way. Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard.

Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock.

### OPERATING GUIDE

Position the unit where it is to be used, well away from any heat source and with sufficient clearance all round for air circulation. Adequate airflows are vital for the correct functioning of the refrigeration system.

Avoid placing the unit in areas subject to strong draughts or under air conditioning units. Avoid areas of high humidity such as conservatories as the unit will act as a de-humidifier and create excessive amounts of water.

Ensure that it is level. Apply the brakes on the braked castors if fitted.

It is important that after the unit has been positioned, it is allowed to settle for at least 20 minutes before it is switched on. Failure to do so can damage the unit. Do not move or tilt the unit during use.

### OPERATING GUIDE cont'd

#### **Refrigerated Well:**

The refrigeration system is operated by an on/off switch that will illuminate when switched on. To obtain best performance, the following procedure is suggested:

- Switch on the refrigeration system
- Allow the well approximately 30 minutes to reach the required temperature. A little amount of ice may form on the bottom of the well which may require removing from time to time
- Load the well as required.

Certain products such as carbonated drinks can freeze and burst if left within the well for long periods, due to the compressed gases expanding and contracting within the container.

The refrigeration system will automatically defrost every 2 hours for approximately 20 minutes.

Please remember the refrigeration system is not designed to chill food, but is designed to maintain it at a satisfactory temperature before serving.

#### **Overhead Gantry**

The gantry is fitted with a fluorescent tube which is controlled by an on/off switch on the rear of the unit, this will illuminate the lamp.

#### **Replacing a fluorescent lamp**

- Turn off the power to the unit. If the lamp has just failed, it will be HOT.
- Grip the lamp at both ends, near the connectors and twist the lamp approximately 90 degrees.
- Gently pull the lamp out of the connectors.
- Reverse the process to fit, ensuring that the lamp is held firmly and correctly within the connectors before releasing.

### EQUIPMENT CARE

When not in use, switch off and unplug the unit, then empty the contents. If the unit is to be unused for any length of time, store it with the door propped ajar or the unit may acquire a musty smell.

DO NOT move or tilt the unit for a minimum of 20 minutes after switching off, to allow the unit to settle.

Allow to thaw before thoroughly cleaning the interior, ready for return to Event Hire.

Do not use sharp objects, metal scrapers, wire brushes or wire wool pads as they can scratch the surface.

Do not use bleach or any corrosive detergent as they will damage the surface of the unit.

After cleaning with a mild detergent, always remove any residue with a damp cloth and wipe dry.