

GENERAL SAFETY

Contact Event Hire for information and advice on the suitability and safety of this type of equipment.

There is a risk of injury if you do not follow the instructions printed in this guide.

This equipment should only be used by a competent adult who has read and understood these instructions. Anyone with a temporary or permanent disability should seek expert advice before using the equipment.

Keep all children, animals and bystanders away from the set-up area.

Ensure the floor where the bar units are to be sited is level and free from trip hazards and is non-slip.

Never set up or use the Zip Bar if you are ill, tired or under the influence of alcohol or drugs.

Never plug in or operate electrical switches with wet hands. Always switch off and unplug the Zip Bar RCD protected power lead from the main power supply before dismantling, moving or cleaning.

Check the equipment before use, if it shows signs of damage request a replacement.

ELECTRICAL SAFETY

The Zip Bar lighting unit are interconnecting and designed to plug directly into a standard 240volt, 13 amp socket.

Make sure the Zip Bar light units and power socket are switched off before plugging into the power supply.

If the equipment fails to operate or the power cable or plug become damaged, contact Event Hire, do not try to repair it yourself.

Keep the power cable out of harm's way.

Extension leads should be unwound fully, never run them through water or where they may get wet, over sharp objects or where they may be a trip hazard.

The lighting units are supplied with an RCD (Residual Current Device) power lead to reduce the risk of electric shock.

OPERATING GUIDE

Position the bar units on a level floor that is free from trip hazards and is non-slip.

Once the bar units are assembled adjacent to each other, the interconnecting cables for the light units can be joined, before any are attached to the power source.

The lighting units are supplied with an RCD (Residual Current Device) power lead to reduce the risk of electric shock.

Once the units are interconnected and the RCD power lead is connected to the power source, the units are permanently live (ie. no on/off switches for sockets or lights).

Any LED light replacement can only be carried out by the service team at the Event Hire depot as all lights are hard-wired in.

Keep the power cable out of harm's way. Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard.

Make sure the RCD power lead is disconnected from the power socket before disconnecting the interconnecting lighting cables and dismantling the bars.

Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard. Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock.

LEDs and bulbs can only be replaced by service staff at Event Hire depots.

Make sure the power socket and light units are switched off and the light unit are unplugged from the power socket before disconnecting the interconnecting lighting cables and dismantling the bars.