

GENERAL SAFETY

Contact Event Hire for information and advice on the suitability and safety of this type of equipment. There is a risk of injury if you do not follow the instructions printed in this guide.

This equipment should only be used by a competent adult who has read and understood these instructions. Anyone with a temporary or permanent disability should seek expert advice before using the equipment.

Keep all children, animals and bystanders away from the work area. Ensure the floor of the work area is free from trip hazards and non-slip. Never use the equipment if you are ill, tired or under the influence of alcohol or drugs.

Never operate electrical switches with wet hands. Always switch off and unplug the equipment from the power supply before moving or cleaning.

Check the equipment before use, if it shows signs of damage request a replacement.

ELECTRICAL SAFETY

The equipment is designed to plug directly into a standard 240volt, 13 amp socket. Make sure the equipment and power socket are switched off before plugging into the power supply.

If the equipment fails to operate or the power cable or plug becomes damaged, contact Event Hire. **Do not try to repair it yourself.**

Keep the power cable out of harm's way. Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard.

Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock.

Ensure the water boiler and power socket are switched off before plugging in.

OPERATING GUIDE

When siting the unit, make sure that it is level and that there is a free flow of air around the unit and that any vents are not blocked.

Choose a suitable site for the unit, taking into account its use and the heat that will be generated whilst in service.

Remove all protective packaging and inspect for any damage which may effect the machine's electrical safety.

Switch on the power supply. The red neon light indicates that power is on.

Brush the plate with oil and it is now ready for use.

OPERATING GUIDE cont'd

Turn the thermostat dial to the required temperature, the green neon light will show and will extinguish when the temperature is reached. This procedure will be repeated as the thermostat maintains a constant temperature.

Unplug the unit prior to moving and never attempt to move the unit while it is hot.

EQUIPMENT CARE

Once you have finished with the unit, switch off and unplug. Allow the unit to cool completely.

The control panel or body containing the electrical fixtures must not be immersed in water or have water sprayed onto them. All other parts are easily removed for cleaning. The unit gives best results if kept clean.

After using the griddle for a short time, a build up of carbon will form on the griddle surface, this is normal, after each session this carbon must be removed. To do this, keep the griddle on a low temperature and scrape with a suitable scraper.

Do not use bleach or any corrosive detergent as they will damage the surface of the unit.

Finally wipe the unit with a damp cloth.