

GENERAL SAFETY

Contact Event Hire for information and advice on the suitability and safety of this type of equipment. There is a risk of injury if you do not follow the instructions printed in this guide.

This equipment should only be used by a competent adult who has read and understood these instructions. Anyone with a temporary or permanent disability should seek expert advice before using the equipment.

Keep all children, animals and bystanders away from the work area. Ensure the floor of the work area is free from trip hazards and non-slip. Never use the equipment if you are ill, tired or under the influence of alcohol or drugs.

Check the equipment before use, if it shows signs of damage request a replacement.

Never carry or pull the burner or gas cylinder by the supply hose.

Wear suitable clothing and footwear, tie back long hair. Never set up the heater near surfaces that might be damaged by heat.

Do not attempt to move the burner while it is lit. Always turn off the gas at the cylinder, then at the heater control and allow it to cool.

Always turn off the burner when not in use. Never leave the burner turned on while unattended.

It is the hirer's responsibility to ensure all necessary precautions are taken to safeguard against the risk of fire and injury.

HEALTH & SAFETY REGULATIONS

The use and storage of LPG cylinders is governed by specific regulations/legislation. Make sure you know and understand the regulations that apply and follow them. If in any doubt, contact an Event Hire representative for advice.

GAS SAFETY

Read the "LPG Safe Use & Set Up" instructions. Propane is highly flammable and heavier than air, this increases the risk of explosion. Keep gas cylinders upright at all times, do not drop or knock them. Damaged cylinders can be dangerous.

Store gas cylinders in the open air, in a secure, cool area; away from heat, possible ignition source and clear of drains or depressions where any leaked gas may collect.

DO NOT smoke or permit naked flames in the area when changing gas cylinders.

Handle gas cylinders and connectors with care. Carefully check the connections for leaks (the use of a proprietary leak detector is recommended).

NEVER test for leaks with a naked flame.

GAS LEAKS

If a gas leak is suspected...Inform everyone in the area, asking them to extinguish or turn off everything that may ignite the gas.

DO NOT OPERATE ELECTRICAL SWITCHES, THEY MAY GENERATE SPARKS.

If safe to do so, open any doors or windows, close cylinder valves and take cylinders into the open.

If a large amount of gas has escaped, evacuate the area and call the Fire Brigade, informing them that gas cylinders are involved and how many there are.

OPERATING GUIDE

THIS TWIN RING BURNER IS SUITABLE FOR OUTDOOR USE ONLY. NOT FOR USE INDOORS

This burner is intended for professional use by qualified people. Set the burner up on a firm level non-flammable surface, with a minimum 400mm clearance all round.

Fit the regulator to the cylinder making sure the burner control knobs are in the off position. The regulator has a left hand thread, tighten using the spanner provided.

Check that the connections are in good condition and free from dirt, oil and grease.

Always position the cylinder outside the marquee, as far away from the appliance as possible.

Before fitting the cylinder, make sure it is fully closed, then remove the screw-in plastic plug (left hand thread).

Make sure the appliance's gas control taps are in the off position, screw the regulator to the gas cylinder (left hand thread) and tighten with the spanner provided.

Check for leaks (see GAS SAFETY) and then site the cylinder in a safe position away from the appliance.

Lighting the Burner:

- Check for leaks (see GAS SAFETY)
- Turn on the gas supply at the cylinder. Apply a lighted match or taper to the burner and open the relevant control knob.
- Use the control knob to adjust the flame.
- Ensure the pan /container is sitting securely on the burner framework.

When finished, turn off the gas supply at the cylinder and then ensure the control knobs are turned to the off position. If the flame does not go out when the switch / regulator is turned off, leave the appliance alight and call Event Hire. **DO NOT ATTEMPT TO DISCONNECT**