

GENERAL SAFETY

Contact Event Hire for information and advice on the suitability and safety of this type of equipment.

There is a risk of injury if you do not follow the instructions printed in this guide.

This equipment should only be used by a competent adult who has read and understood these instructions. Anyone with a temporary or permanent disability should seek expert advice before using the equipment.

Keep all children, animals and bystanders away from the area of use.

Ensure the area being vacuumed is clear and ensure the power cable is out of harm's way and does not become a trip hazard.

Never set up or use the vacuum if you are ill, tired or under the influence of alcohol or drugs.

Never plug in or operate electrical switches with wet hands.

Always switch off and unplug the vacuum from the power supply before adjusting, adding or removing implements or emptying.

Check the equipment before use, if it shows signs of damage or if parts are not fitted securely request a replacement.

ELECTRICAL SAFETY

The vacuum is designed to plug directly into a standard 240volt, 13 amp socket.

Make sure the vacuum is switched off before plugging into the power supply.

If the vacuum fails to operate or the power cable or plug become damaged, contact Event Hire, **do not try to repair it yourself.**

Keep the power cable out of harm's way.

Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard.

Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock.

OPERATING GUIDE

Make sure the vacuum is switched off before connecting to the power supply.

Keep the power cable out of harm's way.

Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard.

Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock.